






- 1 -

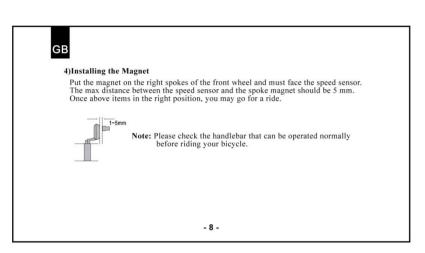


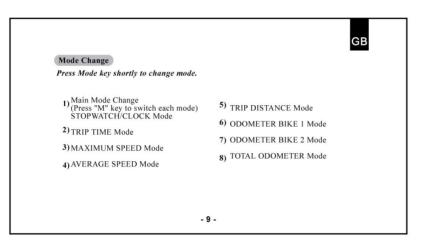


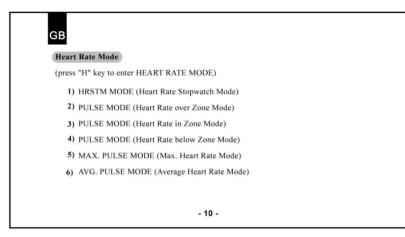


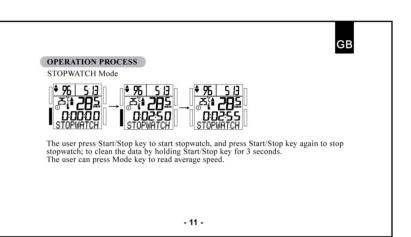


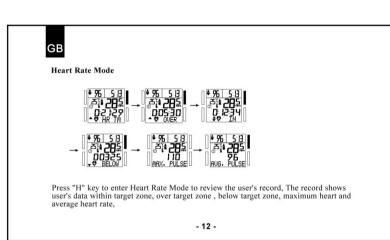


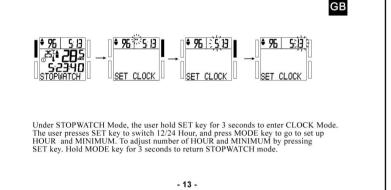


 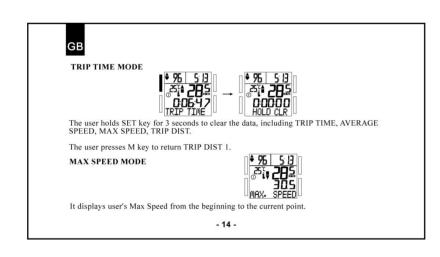


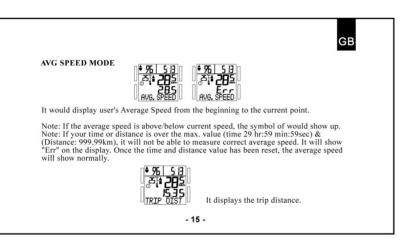

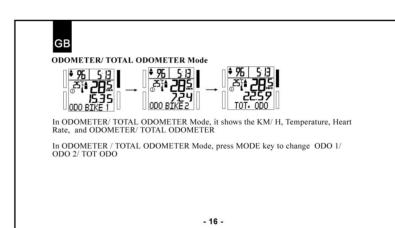

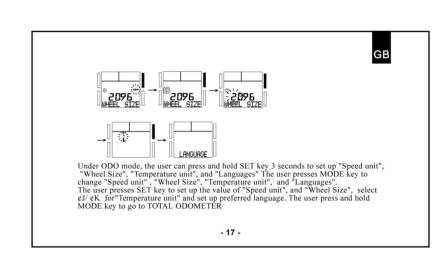

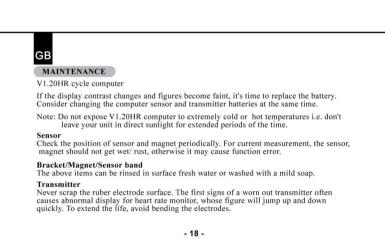




Battery life: CR2032 x1 / approx. 10 months (when using 1 hour/day)


ATTENTION: At a break during your ride the receiver will be switched off after 30 minutes (battery consumption). Before continuing your ride your need to switch on the Computer again, press MODE button.


V1.20HR computer: Unscrew the back cover. Look closely at the battery. Gently remove the battery and replace it with a new battery model CR2032. the (+) side facing up.


Unscrew the back cover. Look closely at the battery. Gently remove the battery and replace it with a new battery - model CR2032. the (+) side facing up. Warining: All the datas will be lost when the battery replaced!


- 19 -

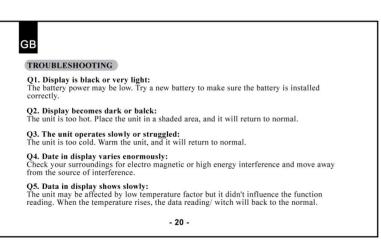

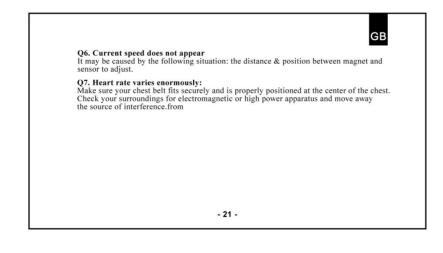

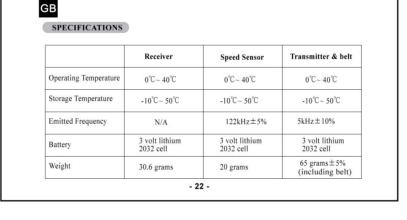

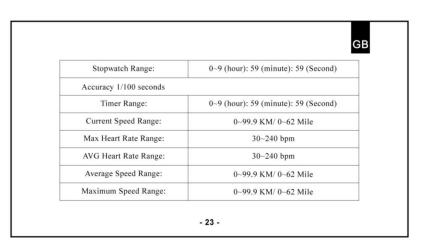

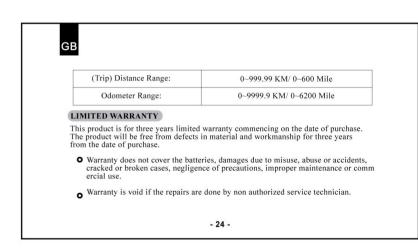

0	including imp shall manufac	lied warrar turer be lia	nty of mercl	nantability an damages, dir	ect or incidenta	er warranties r purpose. In no o il, consequential products describ
---	--------------------------------	-----------------------------	--------------	--------------------------------	------------------	--

• During this warranty period (three years) the product will either be repaired or replaced without charge. Important Health Notice!!

e read over the following information before using the Cycle Computer.

• If you are severely ill or pregnant, please consult your doctor before using cycle

 Never use the cycle computer in combination with other medical/implanted electronic equipment and device (especially heart pacemakers, EKG equipment, TENS eq uipment, cardio-pulmonary machines and pacemaker.) - 25 -

